

WINDER CONTROLS Australia Pty Ltd 10-14 Kellogg Road Glendenning NSW 2761 (PO Box 320, Doonside NSW 2767)

26th October 2017

Cobar Power Monitoring of Feeders 1 & 2

To manually extract data from the Power Monitoring devices for feeders 1 & 2 please follow the Steps below.



Management: Bernd Portugall

Commercial in Confidence ©Copyright 2015 WINDER CONTROLS Australia Pty Ltd Registered Office: Sydney L5, 23-25 O'Connell Street, Sydney NSW 2000 ABN No.: 58 147 395 364 CSA-P001-6001-1110-PRO-E-0001_0.docx





1) Push Ent Button

Until you reach IA.



2) Push Down arrow

Until you reach Real Power 3P

- 3) Take down reading in KW
- 4) Push Down arrow



Again until you reach Apparent Power 3P

5) Take down reading in KVA

Take readings every 2 hours for Feeder 1 (B101), Feeder 2 (B104) and Winder 1 (B66)

Add Feeder 1 & Feeder 2 values. If the combined total is reaching 23MVA then stop commissioning and notify CSA superintendent.

Note: Please fill in required details in Power Monitoring Spreadsheet.